
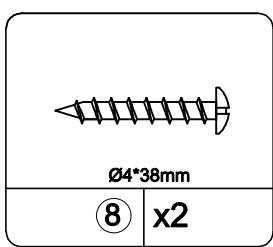
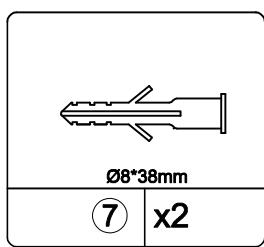
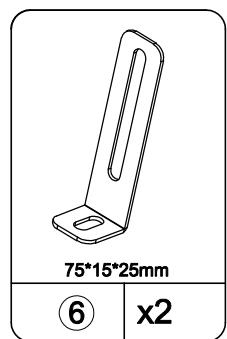
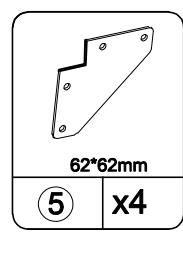
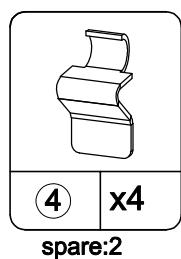
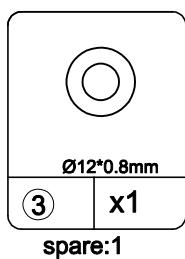
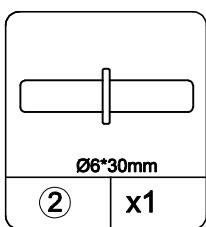


|          |         |   |
|----------|---------|---|
| Hardware | Ctn No. | 1 |
|----------|---------|---|

| No. | Size           | Qty |
|-----|----------------|-----|
| A   | 520x350x24mm   | 2   |
| B   | 510x351x23mm   | 1   |
| C   | 491x349x20mm   | 1   |
| D   | 401.5x352x38mm | 1   |
| E   | 397x200x20mm   | 2   |
| F   | 396x301x25mm   | 1   |
| G   | 396x300x20mm   | 1   |

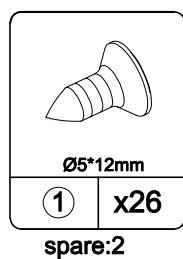


SCREW

WALL ANCHOR




(1) - Attach (A) to (E) as below shown.

Make sure the holes face outward for correct door assembly.


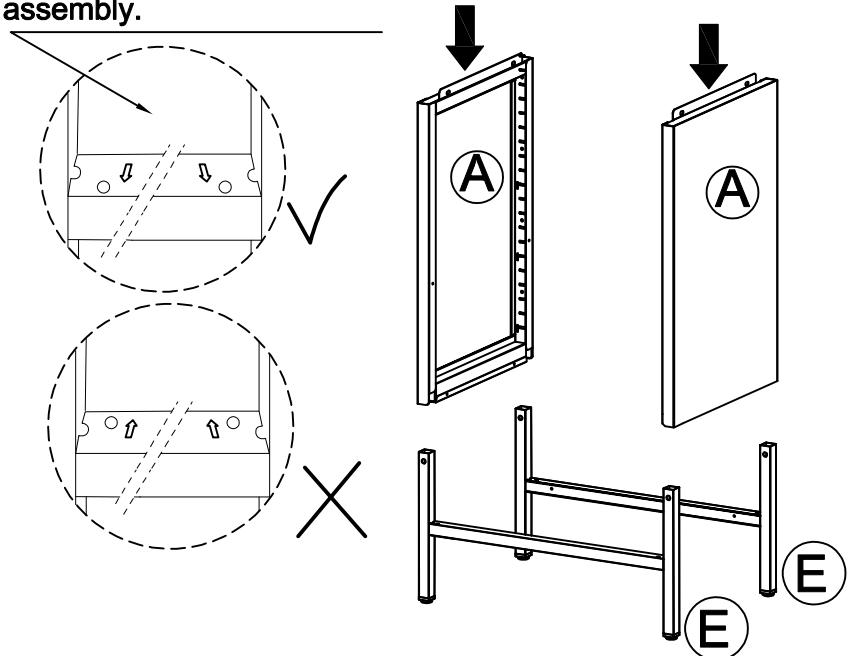


The plastic foot cover face down



(2) - Attach ⑤ to (A)&(E) as below shown.

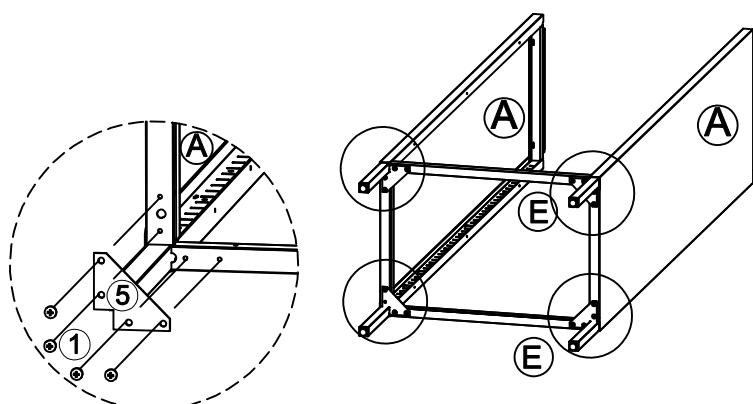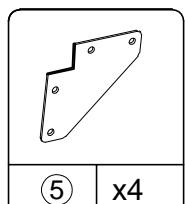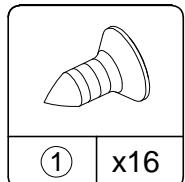


(3) - Attach (B) to (A) as below shown.

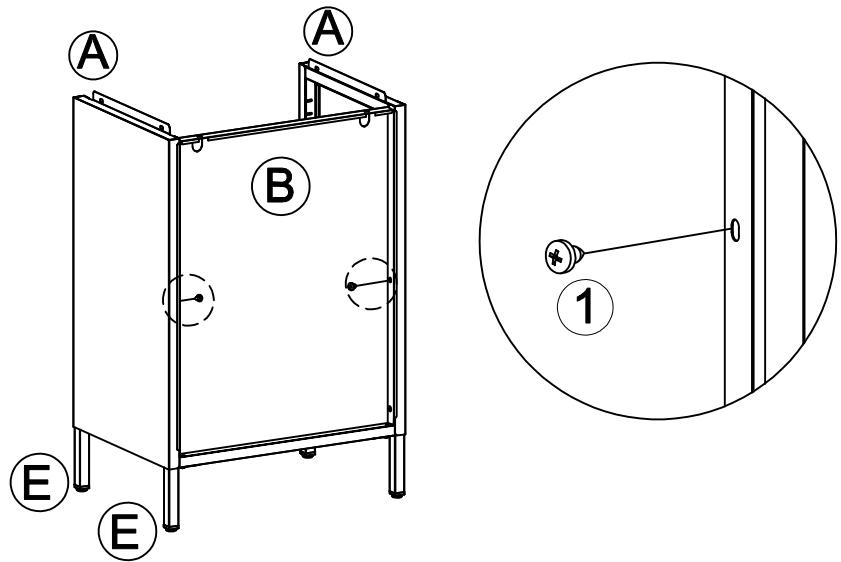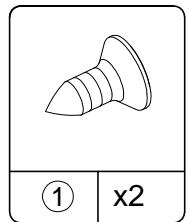



(4) - Attach (B) to (E) as below shown.

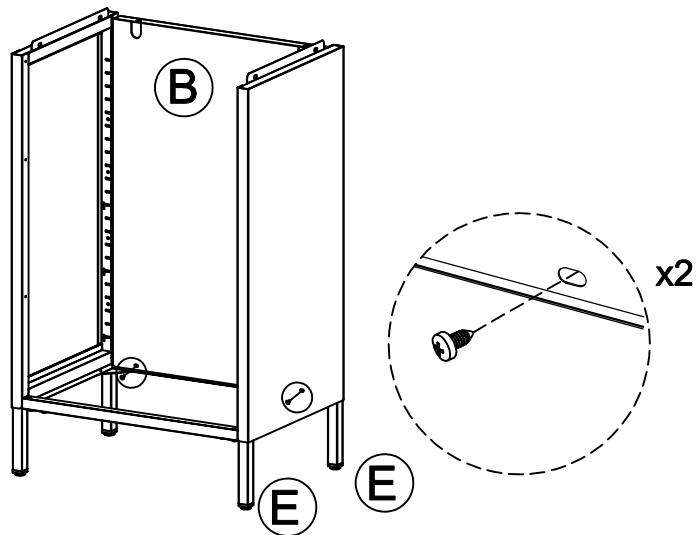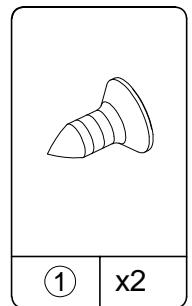




(5) - Attach (F) to (A) as below shown.

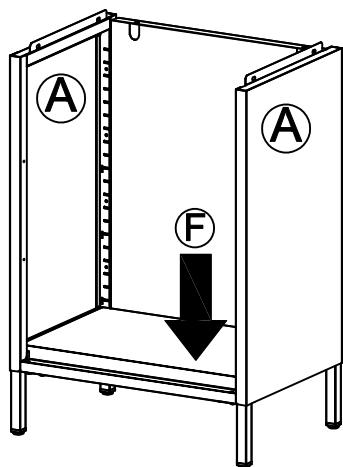



(6) - Attach (D) to (A) as below shown.

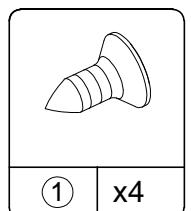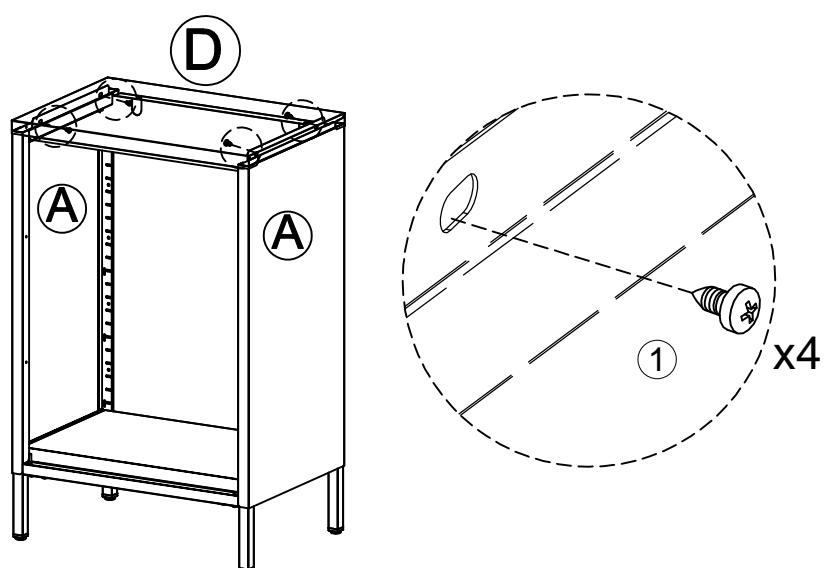





(7) - Attach (B) & (6) to (D) as below shown.

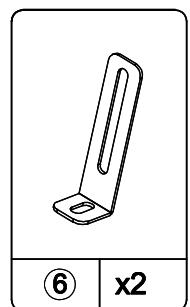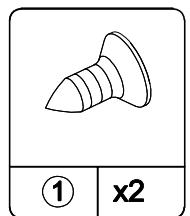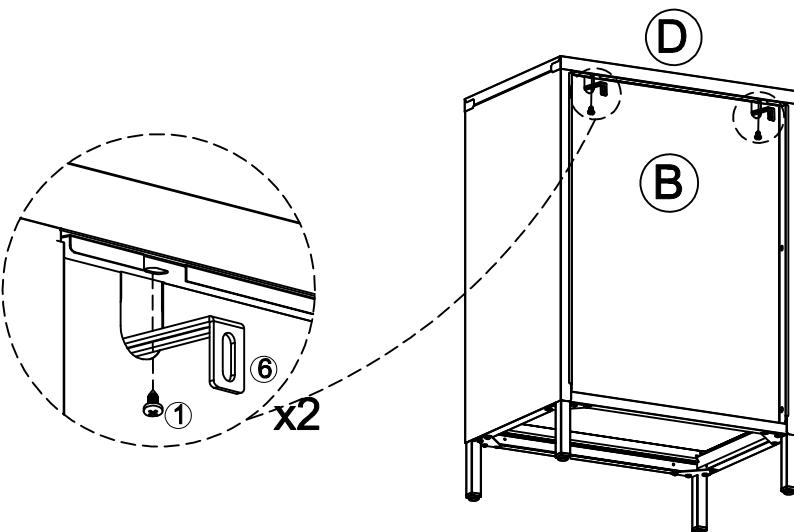



(8) - Attach (G) to pre-assembled unit as below shown.

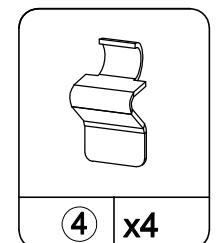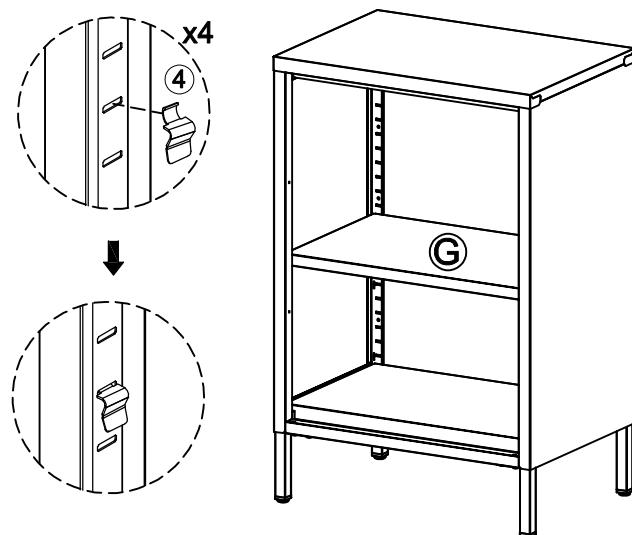



(9) -Attach (2) & (3) to pre-assembled unit as below shown.

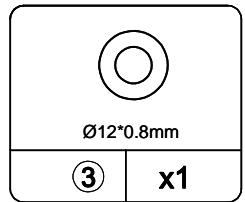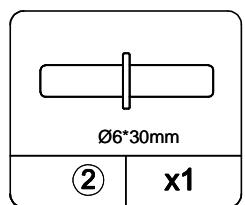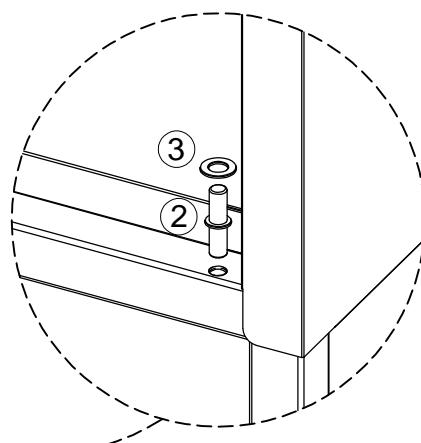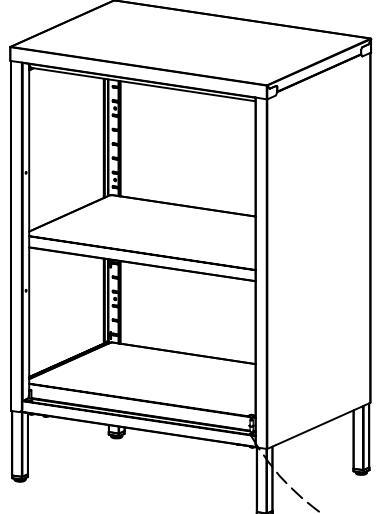

(10)- Attach (C) to pre-assembled unit as below shown.

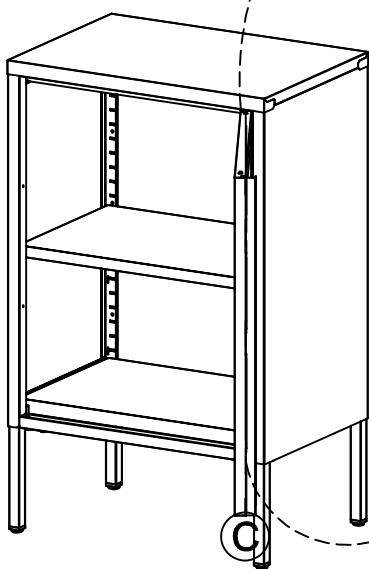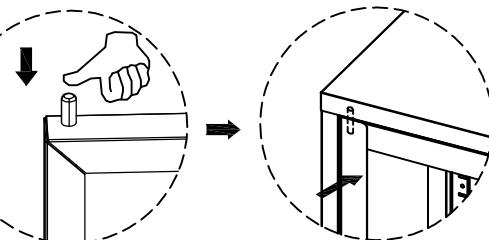

Insert pin (2) into the hole closest to the side panel to ensure proper door assembly.

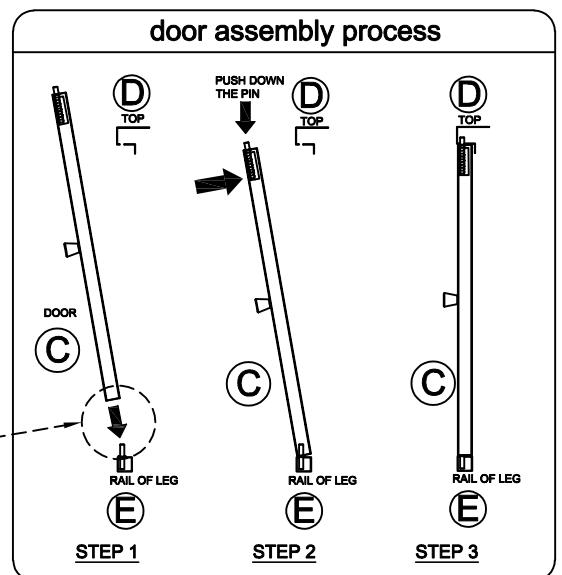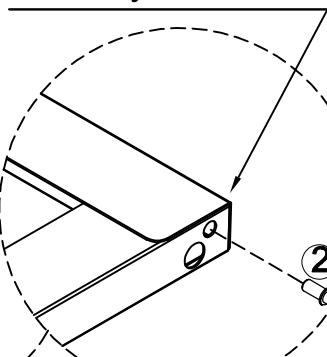


(11)

## Switching door direction

---

**WARNING**

**This step is just to switch the left door to the right door!**

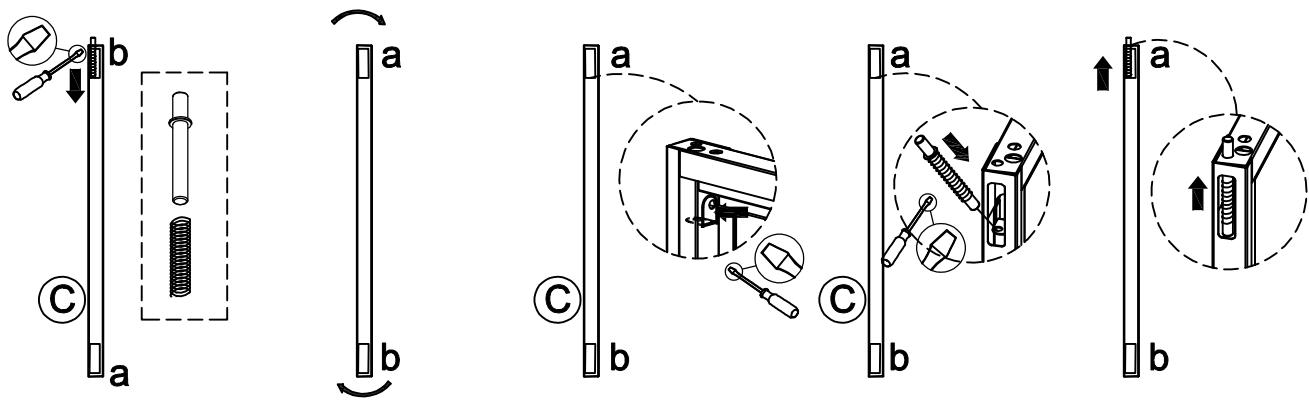

## **STEP 1**


## **STEP 2**

### **STEP 3**

## **STEP 4**

## **STEP 5**

(12)

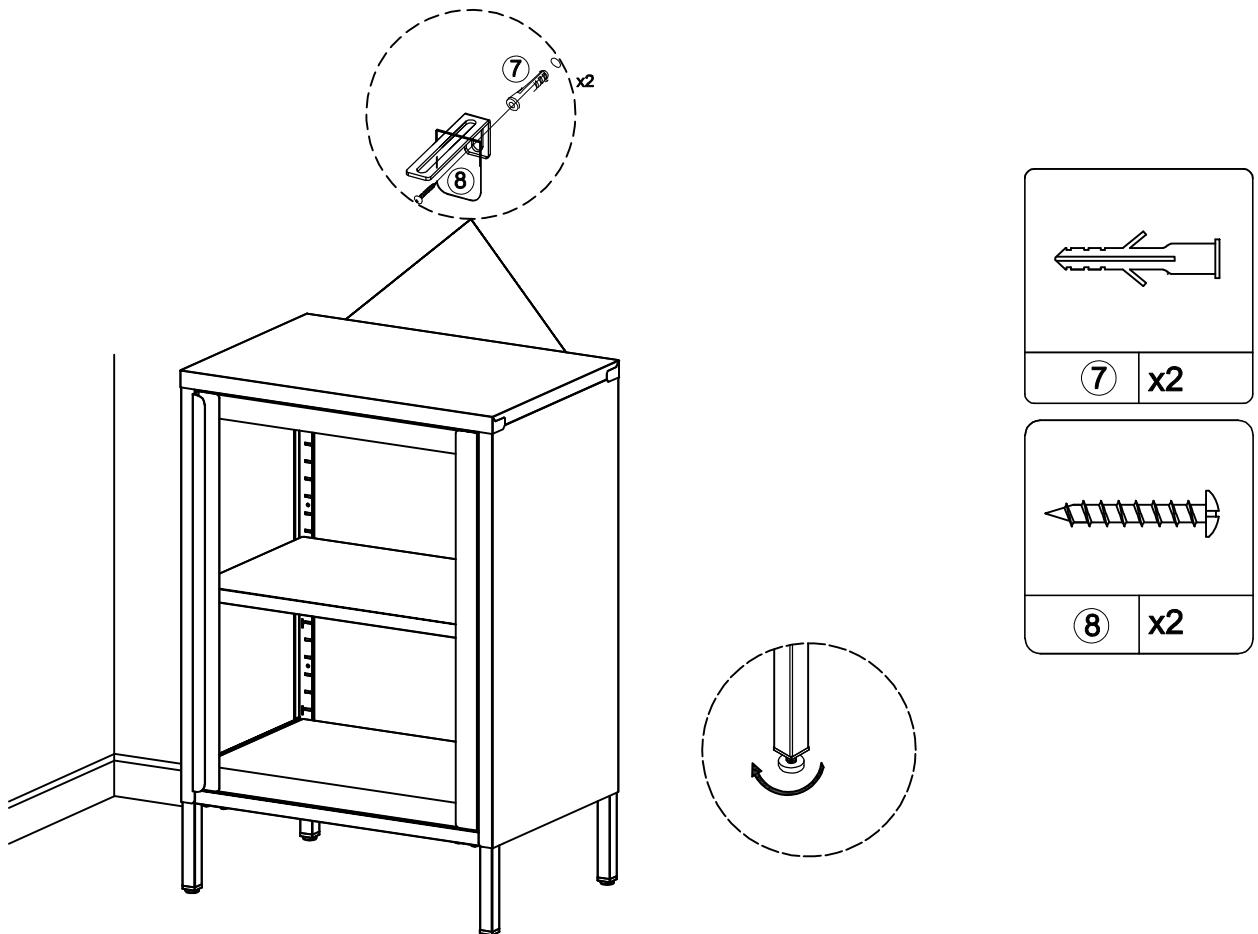

After securing the furniture to the wall, gaps between the doors and frame may appear if it's not level to the floor. Adjusting the legs will fix this.